


Take the responsibility for correct dismantling and assembling. In case of washing or mending of the vest/jacket, the Hit-Air has to be dismantled and assembled carefully and correctly, otherwise it may not work as originally intended or may be damaged.


How to dismantle the airbag system (Key Box Y-type)

Velcro to fixing the airbag system
 Neck cushion Velcro Shoulder 2 places Neck 3 places

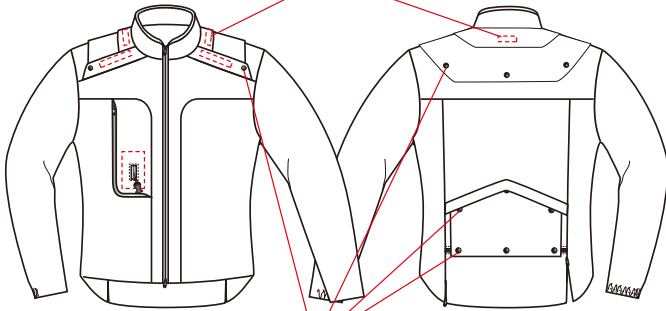

Button to fixing the airbag system
 Neck cushion plastic buttons Front 2 places Back 3 places
 Hip cushion plastic buttons 3 places
 Hip cushion metal buttons 3 places

5. Open 3 zippers for the back cushion(A) and for the body cushion(B,C) of the inside of the vest/jacket.

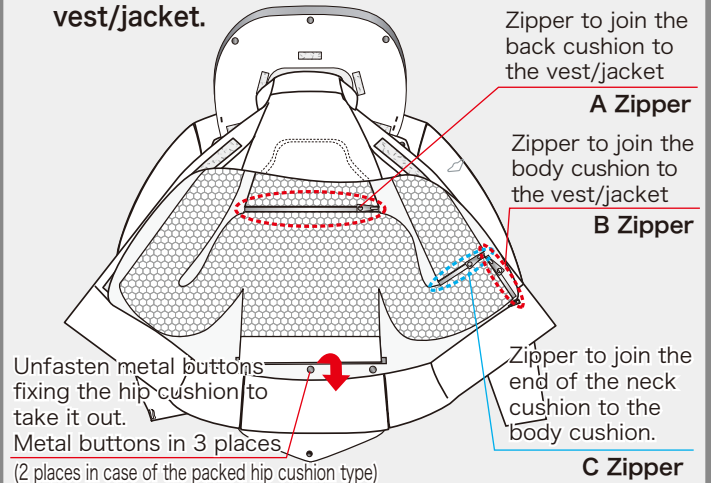


6. Open the fastener (C)

1. Spread out the vest/jacket on a flat surface.


2. Unscrew the CO2 cartridge to remove.

CAUTION Never attempt to turn, loosen or remove the CO2 cartridge except for reassembling.

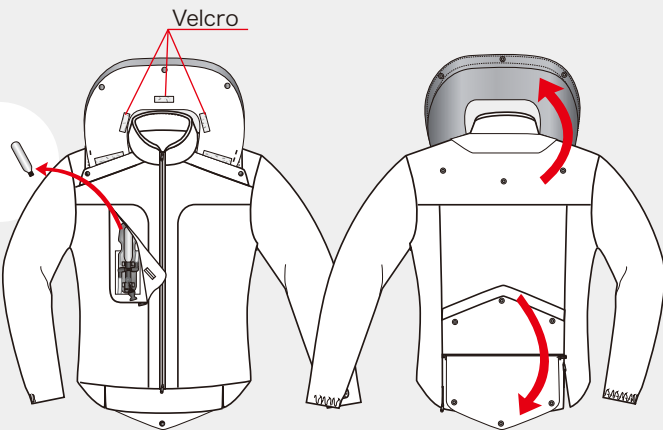


3. Unfasten plastic buttons and Velcro of the neck and hip cushions.

4. Fully open the front zipper and the zipper across the lower part of the inside of the vest/jacket.

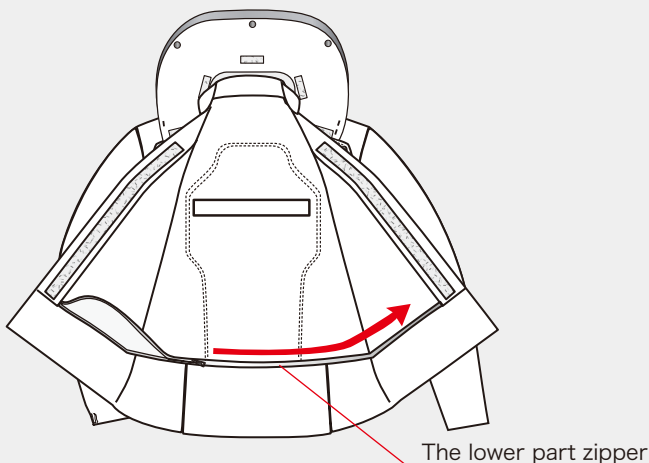

7. Take the end of the neck cushion out through the opening of the left shoulder, unfasten Velcro around the neck and pull it in the direction of an arrow to be separated from the vest/jacket.

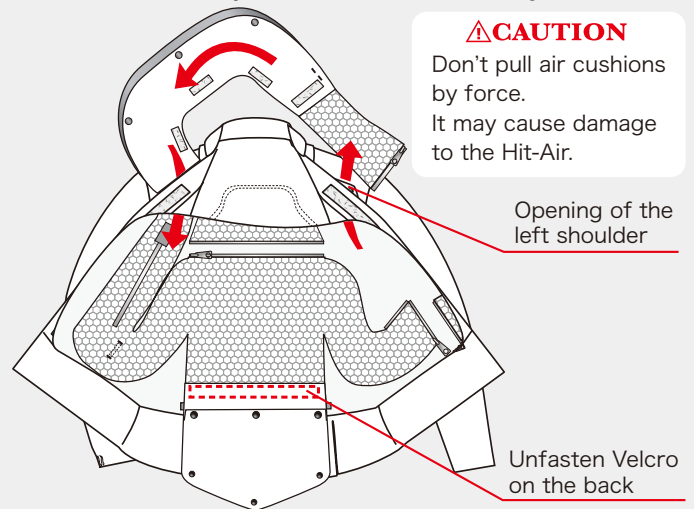

8. Unfasten Velcro around the key box opening to separate from the vest/jacket.

